








Installation

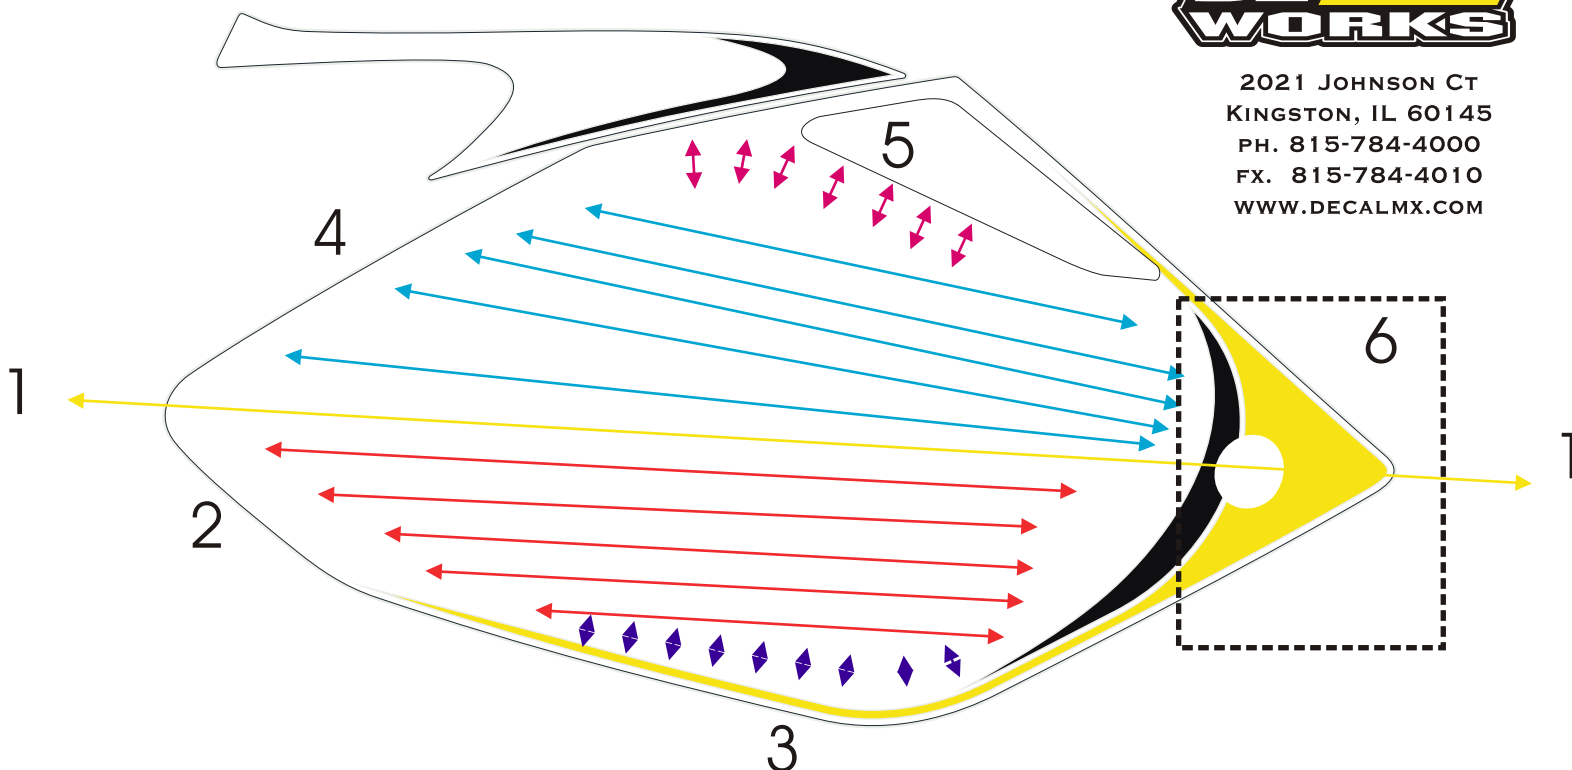

2021 JOHNSON CT
KINGSTON, IL 60145
PH. 815-784-4000
FX. 815-784-4010
WWW.DECALMX.COM



-  1) Line up the bolt hole and then the back corner
-  2) Squeegee the lower part of the decal, In a sweeping motion.
Front to back, Back to front (Or back and forth)
Hold the bottom of the decal "up" (or off the plate) as you go.
- *Once you start your install - It is best to continue on.
Feel free to trim any areas you have not mounted "perfect"*
-  3) When you get to the bottom use your squeegee to push down or out on the lower part of the decal, Split your wrinkles in half as you go.
-  4) Now to the upper part.
Squeegee the decal in a sweeping motion.
Front to back, Back to front (Or back and forth)
Slowly follow the angle of the plate (as shown)
Hold the decal "up" (or off the plate) as you go.
-  5) Now push upward with the squeegee. Split the wrinkles in half just as you did at the bottom.
-  6) Around the bolt hole last. Working it out as you go.